 


CAPTAIN

Part Name

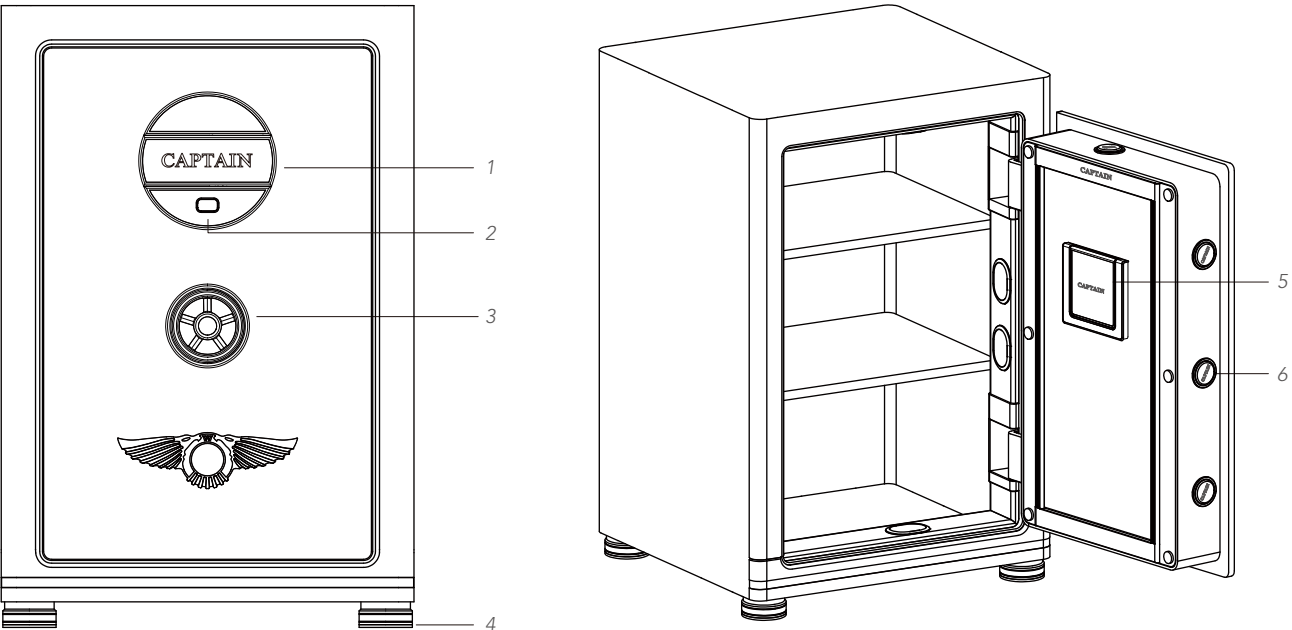

- 1. Electronic fingerprint panel
- 2. Panel Slide Cover Button
- 3. Automatic Hidden Extension Handle
- 4. base
- 5. Built-in battery box
- 6. Chrome plated bolt

Function

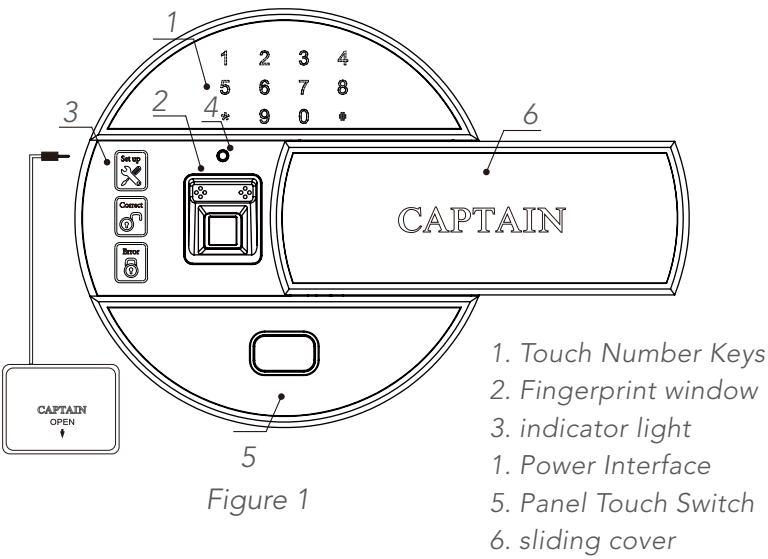 


Figure 1

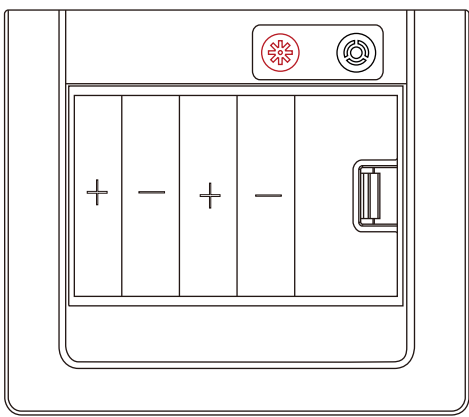 


Figure 2

⚙ Setting Key ⚙ Mode Key

CAPTAIN

■ First Use (Initial Password: 1234)

Load four size AA batteries into the external power supply box, and insert the power supply box into the power connector above the finger window. (Figure 1)

Slightly press the switch on the panel of slider, or slightly press the screen to start the password window (Figure 1). Input any fingerprint or the initial password "1234" and press the key "#" to confirm. The voice prompts "please configure fingerprint /password and lock open", turn the handle rightward and pull the door open. Open the internal power supply box and load four size AA batteries (Figure 2) to finish the initial operation.

■ Registration Key (Fingerprint/Password)

Press the red set key, the voice prompts "Please configure the secret key". Input fingerprint in the fingerprint window, and voice prompts "fingerprint configuration is successful." If the configuration fails, it prompts "fingerprint is invalid". If no configuration is set in 5 seconds, the system will exit automatically. Configuration of total 30 fingerprints is supported.

Press the red set key, the voice prompts "Please configure the secret key". Enter a 4-12 digit password, and press the key "#" to confirm. Voice prompts "Please enter the password again", and confirm the password again, press the key "#" to confirm, and voice prompt "password configuration is successful."

■ Delete the Key (Fingerprint/Password)

Hold down the red set key, voice prompts "clear secret key; all successful cleared", then delete all configured secret keys (fingerprints, passwords).

■ High Security Mode

Press the black set key to set the high-security mode switch. Start the high-security mode and voice prompts "setting successful". Two random groups of configured fingerprints or passwords including one group of password and one group of fingerprint are required to open. In normal mode, any one group of password or fingerprint can be used to open.

■ Vibration Alarm

Hold down the black set key to switch between alarm ON/OFF. The system tweeter gives a long sound and vibration alarm is on. The system tweeter gives three clicks, and vibration alarm is off.

When the system detects a certain intensity of shock, vibration alarm system will start up. The tweeter alarms for 20 seconds, and the indicator light flashes for 60 seconds. Enter any registered fingerprint or password to release the alarm.

■ False Alarm

For five consecutive errors of input of secret key (fingerprint, password), the system starts error alarm. All indicator lights flash for 180 seconds, and the tweeter alarms for 20 seconds. No operation can be done in the error alarm state.

■ Low Pressure Alarm

When the system detects that the power supply is less than 4.8V, the system will start the low voltage alarm automatically. A voice prompts "battery is used out" in the course of opening or closing the door. Please replace the battery promptly.

■ Network Configuration

Press the red and black set keys at the same time, the screen light flashes, voice prompts "configure operation" and the network configuration is started. Please refer to the network configuration manual.(No smart shield function Please ignore this feature.)