


# CAPTAIN

## Part Name

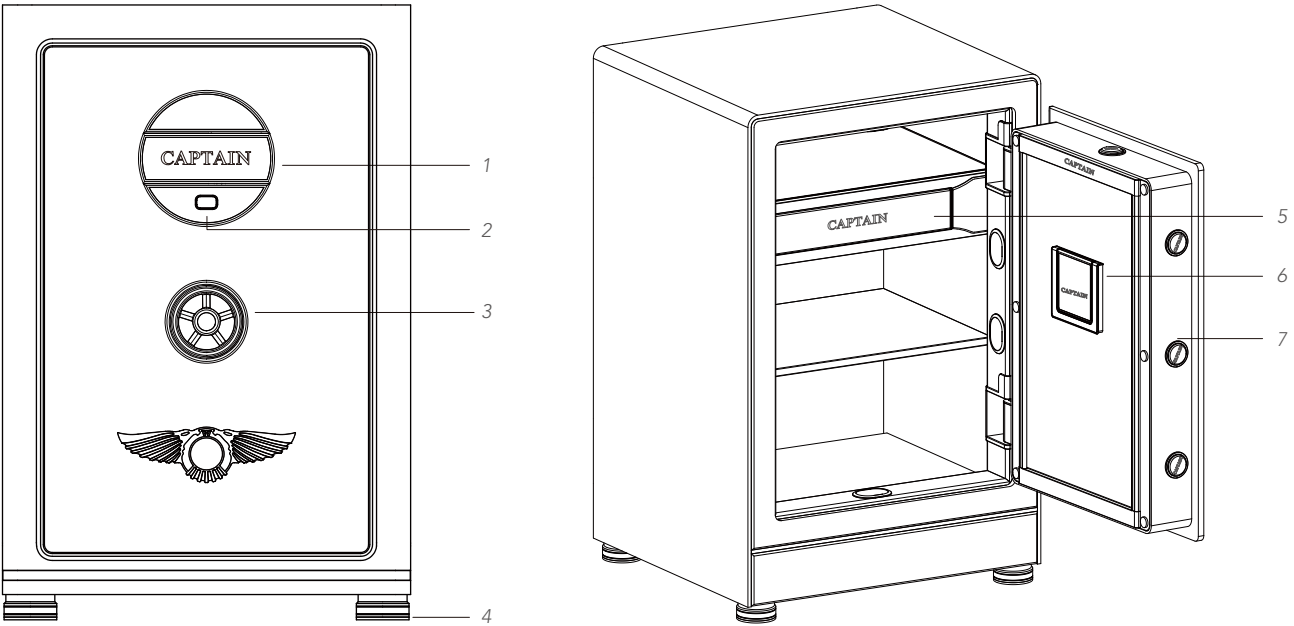

1. Electronic fingerprint panel
2. Panel Touch Switch
3. Automatic Hidden Extension Handle
4. base
5. Stainless steel drawer
6. Built-in battery box
7. Chrome plated bolt

## Function

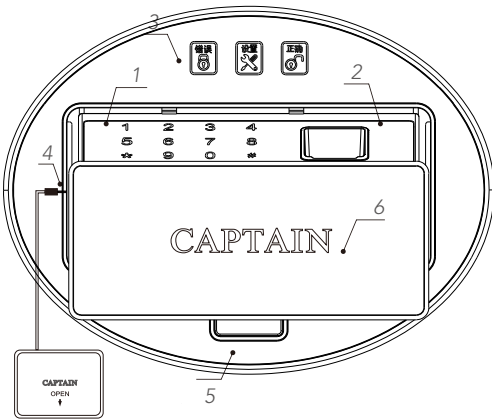


Figure 1

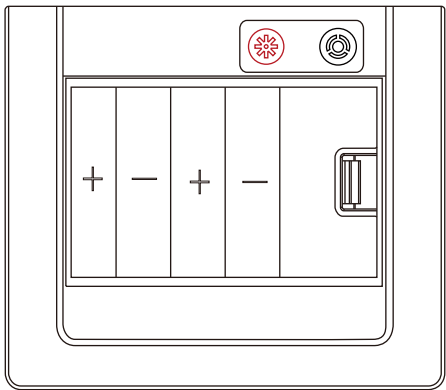


Figure 2

1. Touch Number Keys
2. Fingerprint window
3. indicator light
4. Power Interface
5. Panel Touch Switch
6. sliding cover

⚙ Setting Key    🔊 Vibration Switch Key

# CAPTAIN


---

## ■ First Use (Initial Password: 1234)


Load four size AA batteries into the external power supply box, (Tap the slide panel touch switch (Figure 1, 5 position), the panel automatically slide open, the power supply box into the right panel power connector.

Input any fingerprint or the initial password "1234" and press the key "#" to confirm. The voice prompts "please configure fingerprint /password and lock open", turn the handle rightward and pull the door open. Open the internal power supply box and load four size AA batteries (Figure 2) to finish the initial operation.

## ■ System Management

Press the red management key " " (Figure 3), and the voice prompts are "for fingerprint management, press 1" , "for password management, press 2" , and "for setting management, press 3" . According to the voice prompts, press the corresponding number keys respectively to manage the "fingerprint", "password", and "settings".

The key "\*" is for return to the previous menu until exit system. The system will auto exit if on operation is given in 5 seconds. The key "#" is for repeat of the voice prompt.

Hold the red management key " ", the voice prompts "successful initialization". The system clears all configured fingerprints and passwords, in addition to voice settings, other parameters restore the factory settings.

## ■ Fingerprint Management

According to the voice prompt, press the number key "1" to enter the fingerprint management menu. Voice prompts are: "press 1 to configure fingerprint", and "press 2 to delete fingerprint". According to the voice prompts, press the corresponding number keys and you can configure or delete fingerprints.

## ■ Configuration Fingerprint

In fingerprint management mode, press the number key "1" to configure the fingerprint according to the voice prompt. The voice prompts "Please configure fingerprint". Input the fingerprint and the voice prompt "fingerprint successfully configured". Press the number key "1" again, and you can configure the second fingerprint. If the configuration fails, it prompts "invalid fingerprint". If no configuration is set in 5 seconds, the system will exit automatically. Configuration of total 30 fingerprints is supported.

## ■ Delete Fingerprints

In fingerprint management mode, press the number key "2" according to the voice prompt, the system will delete all configured fingerprints. After a successful operation, the voice prompts "fingerprint deleted successfully". In case of failure, the voice prompts "fingerprint deletion failed."

## ■ Password Management

According to the voice prompt, press the number key "2" to enter the password management menu. Voice prompts are: "press 1 to configure password", and "press 2 to delete password". According to the voice prompts, press the corresponding number keys and you can configure or delete passwords.

# CAPTAIN

---

## ■ Configure Ciphers

In password management mode, press the number key "1" to configure the password according to the voice prompt. Voice prompt "Please enter a new password". Enter a 4-10 digit password and press the key "#" to confirm. The voice prompts "Please re-enter the new password". Enter the password again and press the key "#" to confirm. The voice prompts "password configuration is successful". If the configuration fails, it prompts "password invalid". If no configuration is set in 10 seconds, the system will exit automatically. Configuration of total 30 passwords is supported.

## ■ Delete Password

In password management mode, press the number key "2" according to the voice prompt, the system will delete all configured passwords. After a successful operation, the voice prompts "password deleted successfully". In case of failure, the voice prompts "password deletion failed."

## ■ Setup Management

According to the voice prompt, press the number key "3" to enter the setting management menu. Voice prompts are: "press 1 to adjust volume", and "press 2 to enter high-security mode". According to the voice prompts, press the corresponding number keys and you can set volume and high-security mode.

## ■ Modulation

In setting management mode, press the number key "1" according to the voice prompt to adjust the volume. The voice prompts "press 1 to increase" and "press 4 to reduce".

## ■ High Security Settings

In setting management mode, press the number key "2" according to the voice prompt to set the security mode. The voice prompts "press 1 to enter the high-security mode" and "press 2 to cancel the high-security mode".

When the system enters the high-security mode, two random groups of configured fingerprints or passwords including one group of password and one group of fingerprint are required to open. In normal mode, any one group of password or fingerprint can be used to open.

## ■ Voice Settings

In setting management mode, press the number key "3" according to the voice prompt to set the voice. The voice prompts "press 1 to shift to Chinese" and "press 2 to shift to English".

## ■ Vibration Alarm

Press the black vibration key, the voice prompt "cancel success" (the system default is on), short press again to switch to the open state, the voice prompt "set successfully".

When the system detects a certain intensity of shock, vibration alarm system will start up. The tweeter alarms for 20 seconds, and the indicator light keeps flashing for 180 seconds. Enter any valid configured fingerprint or password to release the alarm.

## ■ False Alarm

For five consecutive errors of input fingerprint or three consecutive errors of input password, the system starts error alarm. All indicator lights flash, the tweeter alarms for 20 seconds, and the error alarm state lasts for 180 seconds. No operation can be done in the error alarm state.

## ■ Low Pressure Alarm

When the system detects that the power supply is less than 4.8V, the system will start the low voltage alarm automatically. A voice prompts "battery is used out" in the course of opening or closing the door. Please replace the battery promptly.